

Description	Attribute	Commands	Parameter	Value range
Music Level	MSCLVL	SET, GET, INC, DEC	Zone	0 - 100
Microphone Master Level	MICLVL	SET, GET, INC, DEC	Zone	0 - 100
Input Source Selection	SELECT	SET, GET	Zone	A, B, C, D
Minimum Music Level	MINMSC	SET, GET, INC, DEC	Zone	0 - 100
Maximum Music Level	MAXMSC	SET, GET, INC, DEC	Zone	0 - 100
Minimum Microphone Level	MINMIC	SET, GET, INC, DEC	Zone	0 - 100
Maximum Microphone Level	MAXMIC	SET, GET, INC, DEC	Zone	0 - 100
Echo received characters	ECHO	SET	-	ON, OFF
Insert LF with CR	CR	SET	-	ON, OFF
Clear character with backspace	BS	SET	-	ON, OFF
RS-232 Response of PM1122-INT	RESPONSE	SET	-	ON, OFF
Connection speed	BAUDRATE	SET	-	2400, 4800, 9600, 19200
Easywave setting	DBLCLICK	SET	-	ON, OFF
Easywave RF Module Learn	RFKEY	LRN	Zone	-
Easywave RF Module Clear	RFKEY	CLR	-	ALL
Easywave RF Module Mode	RFKEY	SET, GET	Zone	SELECT/PRESET
Preset	PRESET	RCL, STR, CLR	(Zone)	0/1/1 - 64
Autonomous Value Feedback	VALFB	SET	-	ON, OFF
Returns current "Controls"	INFO	GET	-	-
Serial Number	SERIAL	GET	-	-
Hardware Version Number	HWVRSN	GET	-	-

SET	Set the value of a variable
GET	Get the value of a variable
RCL	Recall a Preset
LRN	Learn a code of Easywave RF switch
CLR	Clear preset or Easywave RF identification codes
HELP	Lists Commands and Attributes
LST	Lists Commands and Attributes (same as HELP)
STR	Store a Preset
INC	Increase the value of a variable
DEC	Decrease the value of a variable

MSCLVL:	Music Level
MICLVL:	Microphone Master Level
SELECT:	Input Source Selection
MINMSC:	Minimum Music Level
MAXMSC:	Maximum Music Level
MINMIC:	Minimum Microphone Level
MAXMIC:	Maximum Microphone Level